

NETGEAR® USB WIRELESS ADAPTER INSTALLATION INSTRUCTIONS

With Version 6.0 a USB Wireless Adapter is an optional method to access the Internet. The NETGEAR® WG111v2/v3 is fully supported by Version 6.0, and can be purchased directly from Nu Skin (part number: 01006997).

⚠ Other USB Wireless Adapters can be installed and used with Version 6.0; however, they are not supported by Nu Skin.

1. Insert your NETGEAR® WG111v2/v3 USB Wireless Adapter into an USB port.

⚠ Each time you insert your wireless adapter to a different USB port, you will need to re-connect to a wireless network.

2. From the MENU button select Network Manager.



3. The Network Connections window will be displayed.

Click on “Wireless Network Connection.”

4. From the list of available wireless connections select the appropriate wireless network.

⚠ Wireless networks are available in many locations, but not all of them are accessible without a password. If a public network is not available you will not be able to access the Internet.

5. Enter the appropriate Network Key. 6. Upon confirmation of the correct Network Key you should be connected via a wireless connection.

You can close this window, and you are now ready to access the Internet features.

⚠ Network Keys are necessary to access wireless networks. If you do not know the network key for a network, you will not be able to access the Internet.

